


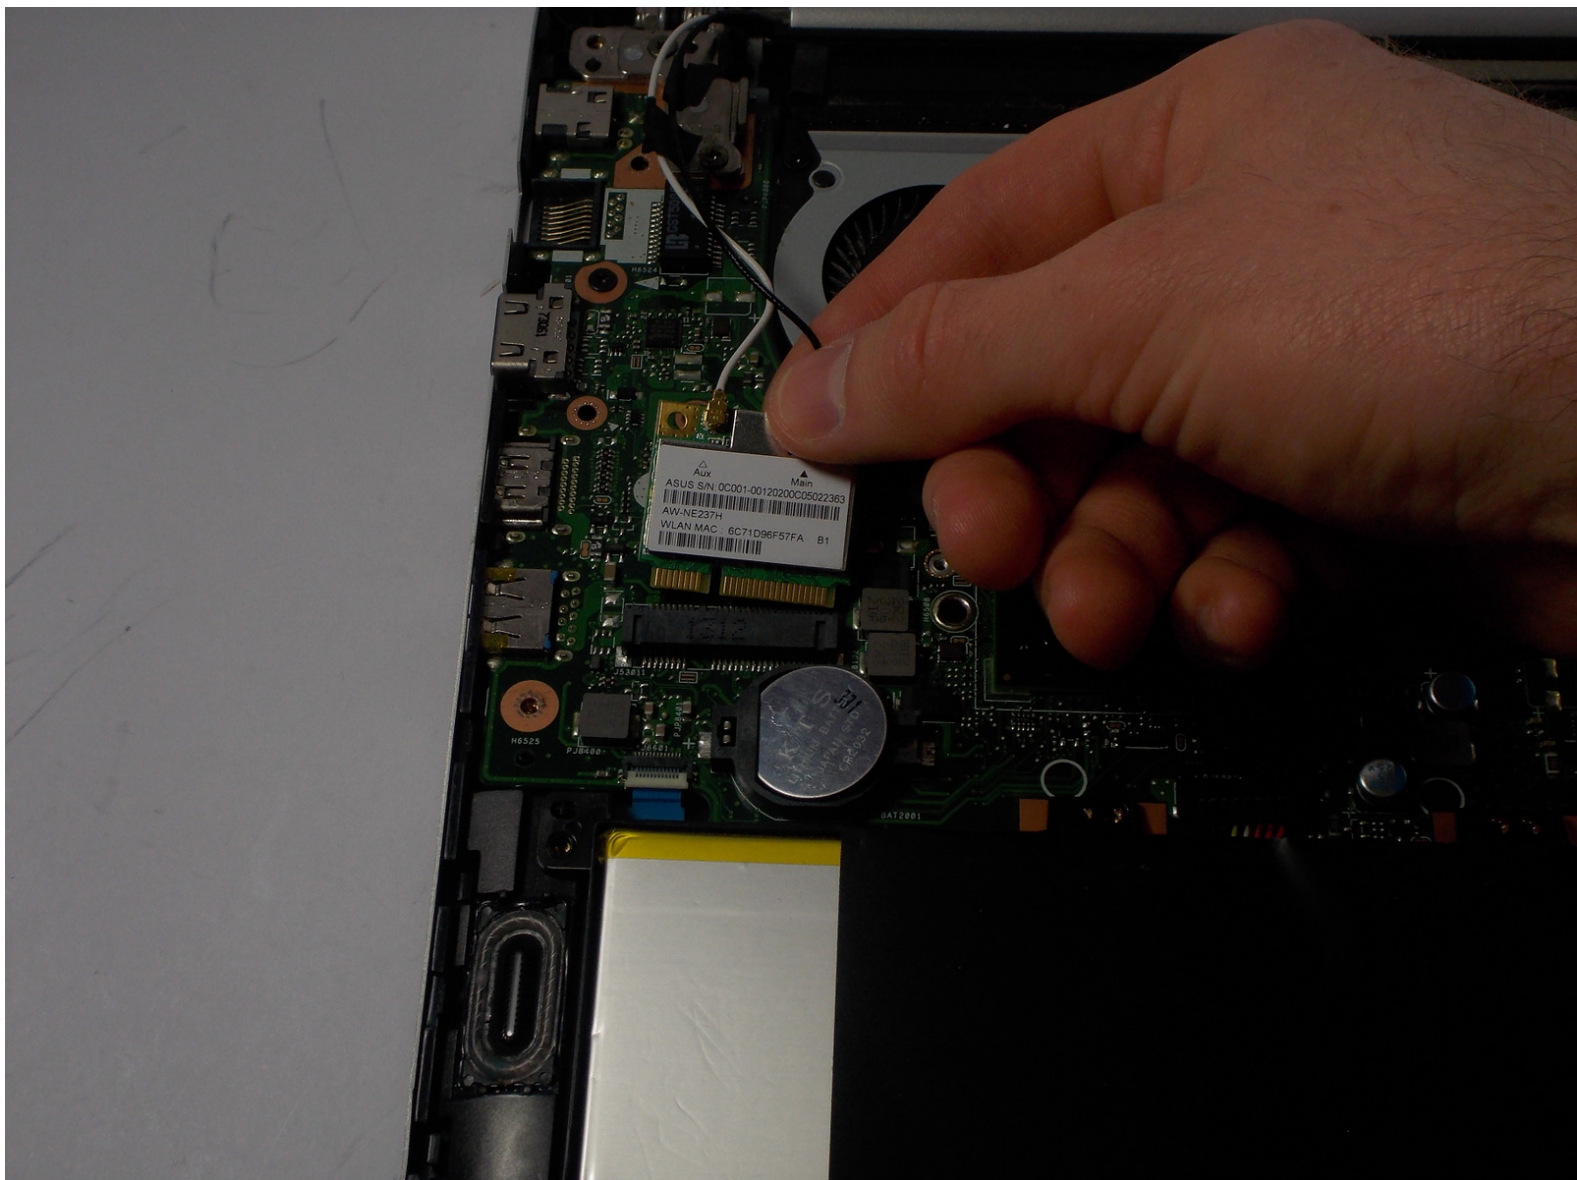

# ASUS VivoBook S300CA-BBI5T01 Wi-Fi Card Replacement

A Wi-Fi card is an essential component for a wireless desktop computer. This card uses an antenna to communicate through microwaves. If the Wi-Fi card of a computer is not working properly, this guide will inform on how it should be removed.

Written By: Keith Rachels



## INTRODUCTION

This guide's focus is on replacing the Wi-Fi card of a wireless desktop computer. Please follow the directions below to accomplish this result.

---



### TOOLS:

- [Phillips #0 Screwdriver](#) (1)
-

## Step 1 — Wi-Fi Card



- Place the laptop upside down so that the bottom panel is facing upwards.


## Step 2



- Unscrew the following 10 screws
  - Eight 5 mm Phillips head screws
  - Two 10 mm Phillips head screws




### Step 3

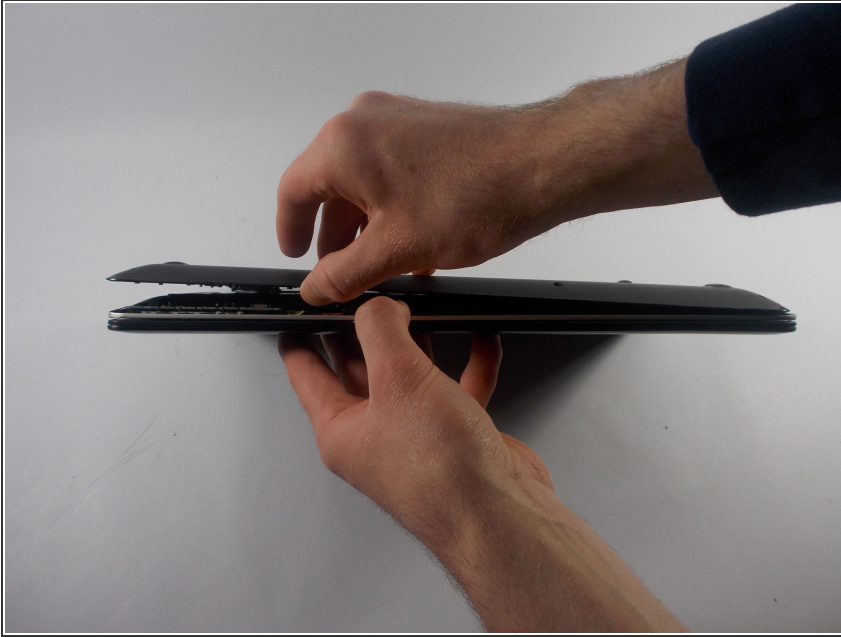


- Carefully peel the panel off of the bottom of the laptop.

### Step 4

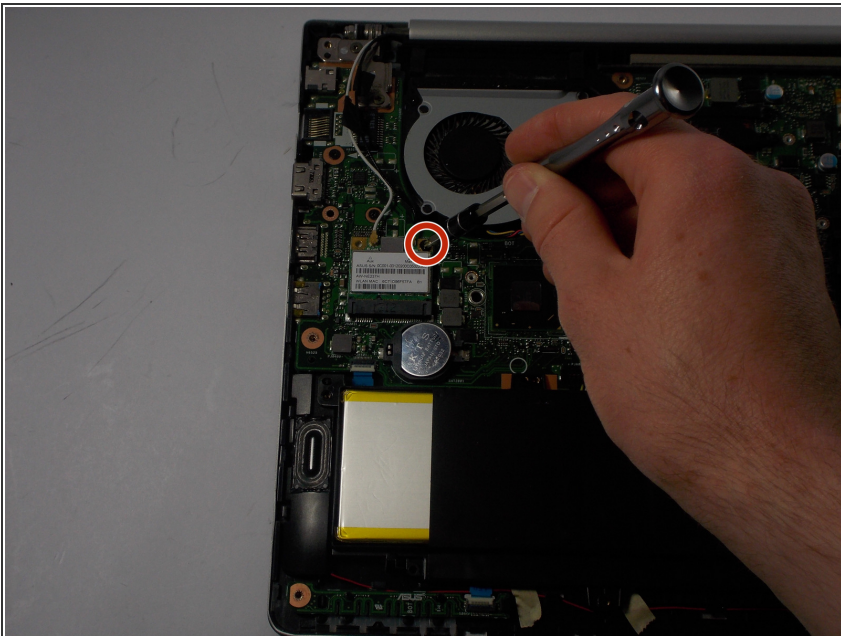


- Remove the one 3 mm Phillips head screw holding the Wi-Fi card in place.

## Step 5

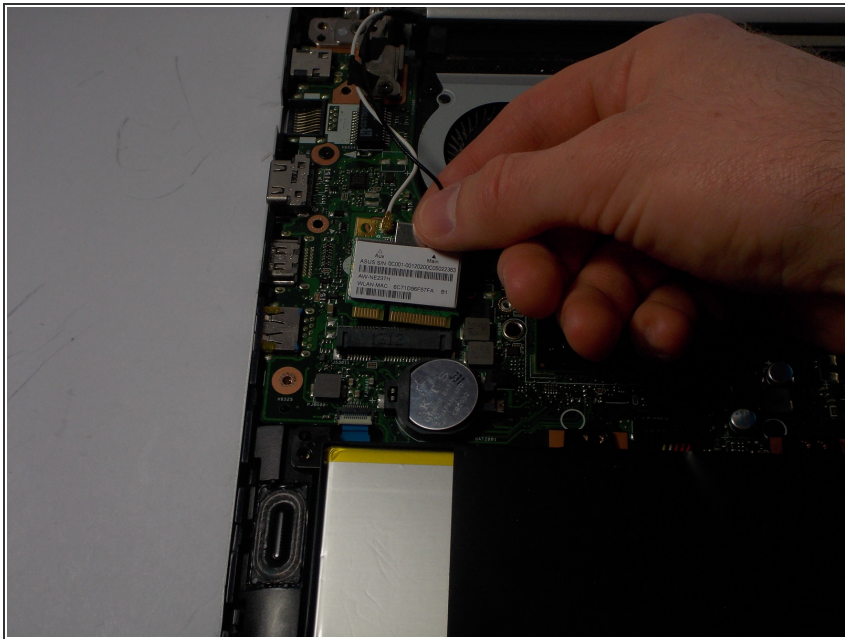

- Carefully slide the card out of its connection port by pulling it outward.

## Step 6

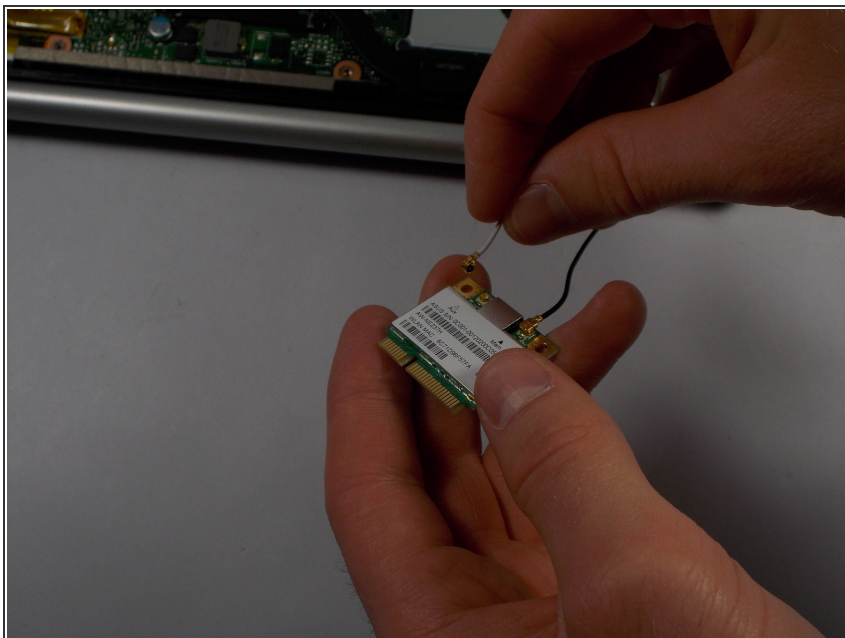

- Remove the black and white antenna cable connector wires by carefully pulling upwards on them.
- ⓘ Note that the black wire connects to "Main" and the white wire connects to "Aux".

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-24 10:19:10 AM.